PREMIUM PAPASAN CHAIR WITH 48" CUSHION


Papasan Chair by theVIEs
"Relax Every Moment, Elevate Your Style."

For any inquiries or 24/7 installation support, please contact us at Contact@theVIEs.com
We guarantee a response within 24 hours.




This is a one-page installation guide.

If you successfully complete the assembly within 10 minutes on your first attempt without referring to the detailed pages, record a video and send it to us, we'll reward you with a special gift!





H3- Washer






H4- Nut




H5- Leveler



H6- Lock Nut

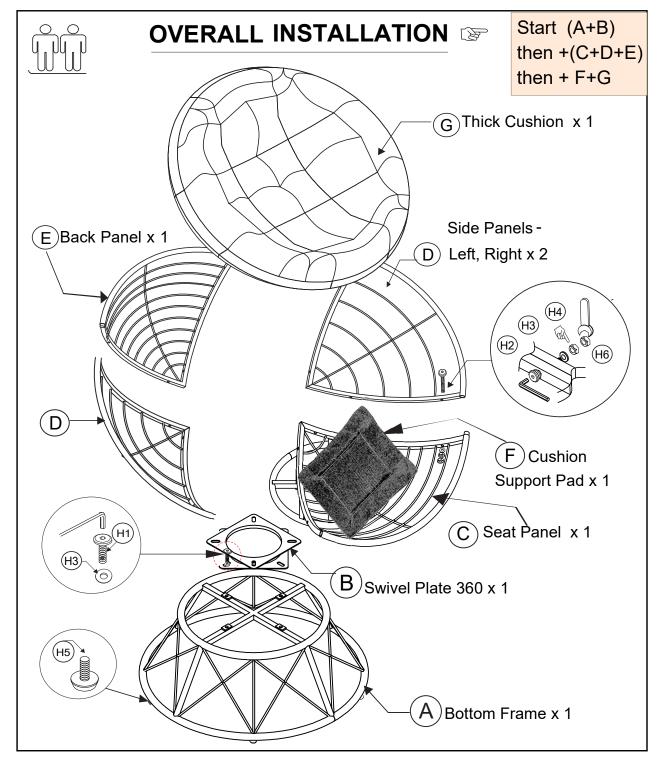

PARTS INCLUDED

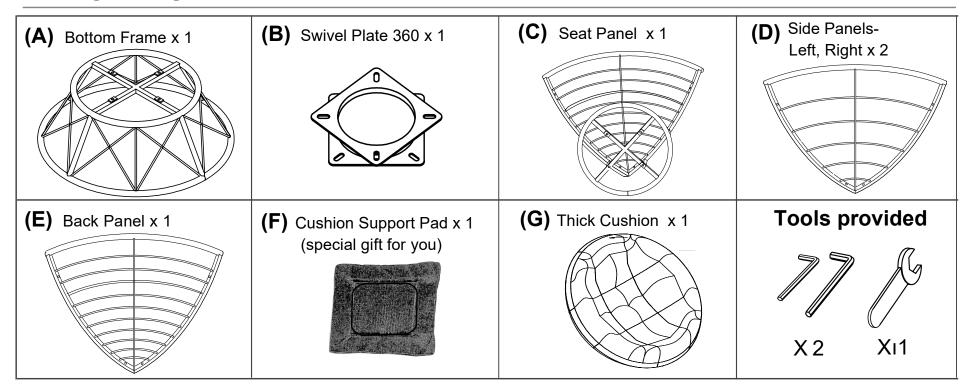


HARDWARE LIST

| H1 - Short Bolt (M6 × 15)× 8 pcs+ 1 extra for spare | (M))))))) X 9 | H3 - Washer (M6) × 16 pcs + 1extra for spare | © X 17 | H5 - Adjustable Leveler Feet (Threaded, M6 × 30) × 6 pcs + 2 extra for spare | X 8 |
|---|---------------|--|-------------|--|------------|
| H2 - Long Bolt (M6 × 45)× 8 pcs+ 1 extra for spare | (A) X 9 | H4 - Nut (M6) × 8 pcs + 9 extra for spare | X 17 | H6 - Lock Nut (M6) × 8 pcs + 1extra for spare | X 9 |


DETAILED INSTALLATION INSTRUCTION

Installation Time: 10-15 Minutes by Follow the Steps Below

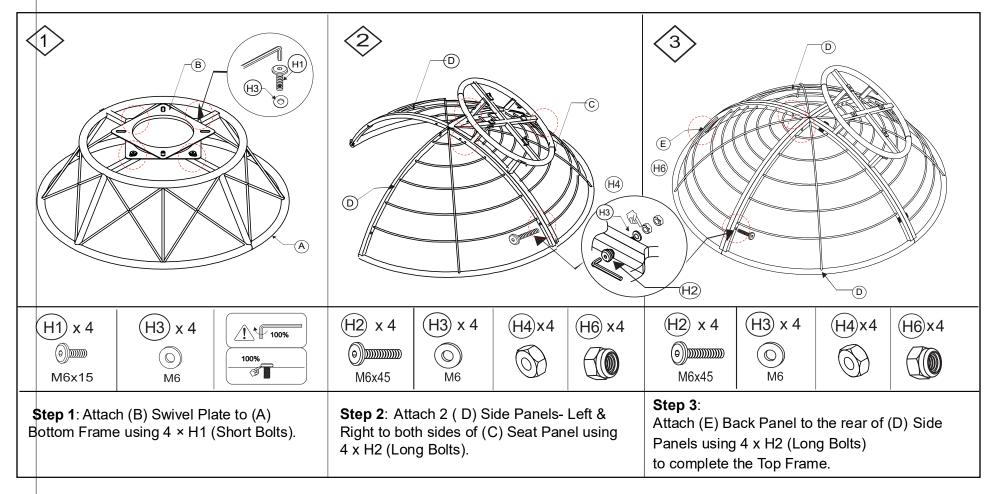


Tips:

- ♦ H3 Usage: H3 (Washers) are crucial for both H1 (Short Bolts) and H2 (Long Bolts).
 Always position H3 (Washers) before inserting H1 or H2 to ensure long-term durability.
- ♦ H4 & H6 Usage: Use H4 for pre-positioning, as it can be quickly adjusted by hand. Then, secure and tighten H2 using H6 to reinforce the structure and enhance stability.



DETAILED INSTALLATION INSTRUCTION

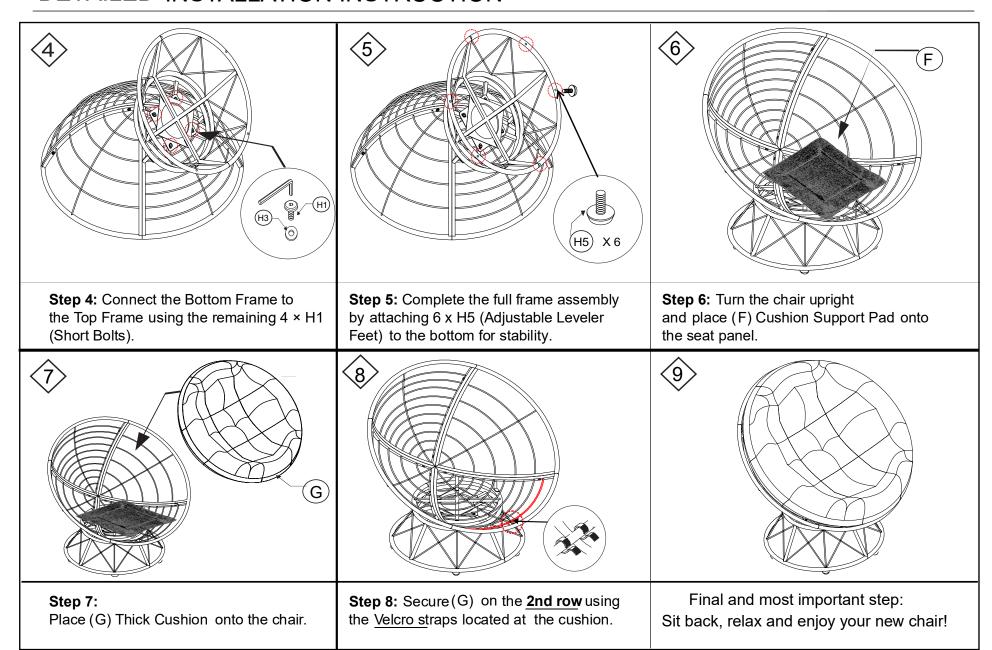

4

We'd love to hear your feedback, so don't forget to leave us a review!

